

**TO USE YOU SIMPLY INSERT THE ECOSWITCH IN-BETWEEN YOUR POWER OUTLET AND YOUR CHOSEN APPLIANCES. IT'S THAT EASY!**



← 900mm →



↑ 1500mm ↓

Put the switch somewhere easy to reach eg. next to your PC.

← 300mm →



Use an EcoSwitch wherever you can group together appliances that have **SIMILAR** patterns of use.

You can use your existing powerboards to create these 'hubs'. Some examples might include:

- TV, DVD, STB, VCR
- PC, MONITOR, PRINTER, SPEAKERS
- AUDIO HUB
- RECHARGERS & PLUG-PACKS

Use another EcoSwitch wherever you have appliances that have **DIFFERENT** patterns of use to 'hubs'. Some examples might include:

- FOXTEL, TIVO, AUSTAR
- GAME CONSOLES
- WIRELESS MODEMS
- BEER FRIDGES
- PHOTOCOPIERS
- FISH TANKS
- COFFEE MACHINES
- AND MORE